RS2 Technologies ACCESS It! Universal.NET Usage - Access It! Universal.NET





General Usage - Access It! Universal.NET



2. Both the User Name and Password are Case Sensitive.




















🔊 Login to Access It! Universal.NET

Password:

Authentication: Access It! Universal.NET Admin



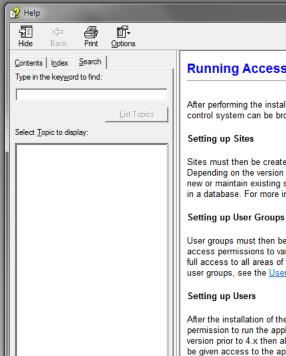

Running Access It! Universal.NET for the First Time

After performing the installation, setup and configuration of the software, several application parameters must be control system can be brought on line.

Sites must then be created to host the system hardware. The default site "Main" is automatically created whe Depending on the version of Access It! Universal.NET that has been installed the number of sites may be fixed new or maintain existing sites within a database and specify various site capacities and parameters. A site is in a database. For more information on sites, see the Sites help file topic.

User groups must then be created to assign groups of user permissions. User groups are used to set up group access permissions to various areas of the software. User group permissions can be assigned which will allow full access to all areas of the software. The default user group "Administrators" has access to all areas of the user groups, see the User Groups help file topic.

After the installation of the Access It! Universal software, the default "Admin" user is assigned to the "Adminis permission to run the application with access to all areas by default with no password assigned. If this installa version prior to 4.x then all of the users from the previous version will be imported also with no password assign be given access to the application before anyone other than the "Admin" user can use the application. For mo the Users help file topic.

Setting up Timezones/Intervals

Timezones must then be set up as needed by using the timezones data entry screen. When creating new time created. The always timezone is predefined for 7 day a week, 24 hour a day access, including holidays. If time important, this timezone may be used instead of defining additional timezones. For more information about time file topic.

Configuring Hardware

System hardware must then be enabled and configured using the Hardware Tree. Hardware is used to define all panels, readers, inputs, outputs, intercoms, CCTV cameras and DVR cameras being used in the system. Using the Hardware Tree, the devices physically installed in the system must be enabled and configured for use in the system. For more information on setting up devices with the Hardware Tree, see the Hardware Tree help file topic.

- 1. As soon as you launch Access It! Universal.NET the internal context sensitive HELP system is started, press the 'F1' key at any time to get HELP for the screen you are currently on.
- This is an Example, you will always have the opportunity to use the Contents, Index, and Search TABs to find any Help screen but it will always take you to the section for the current screen you are on.





























Servers 🔻

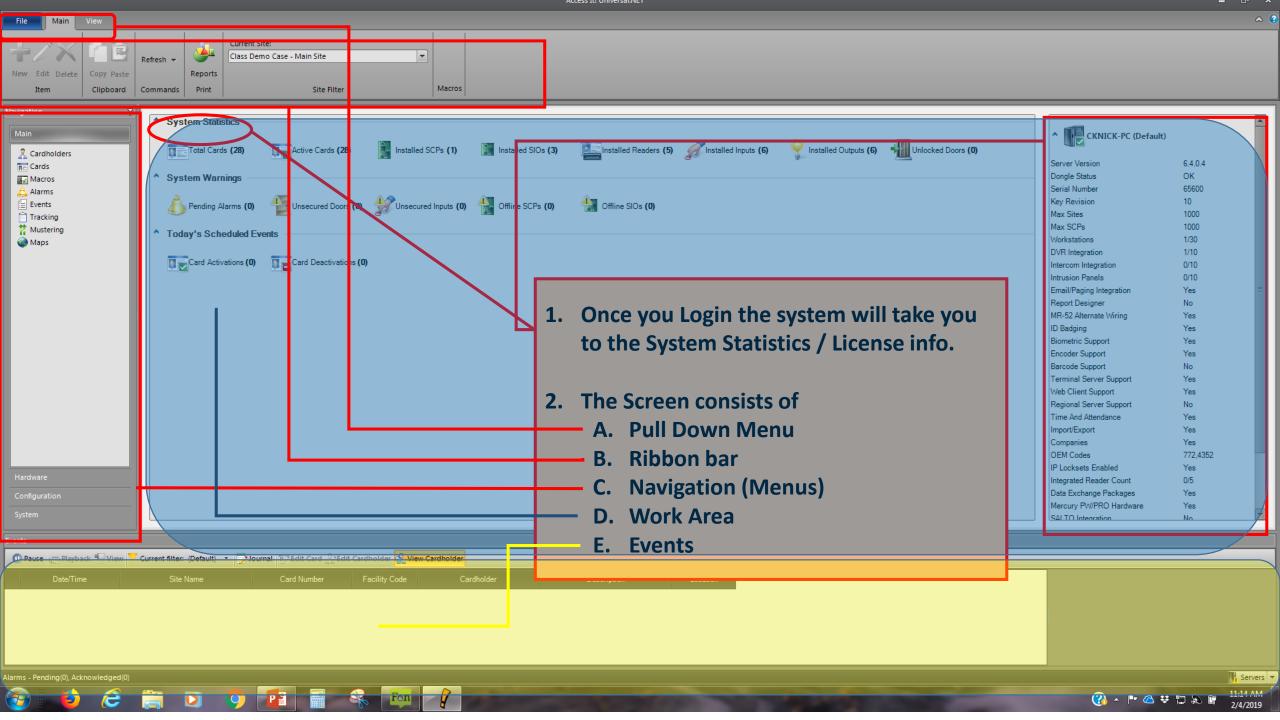


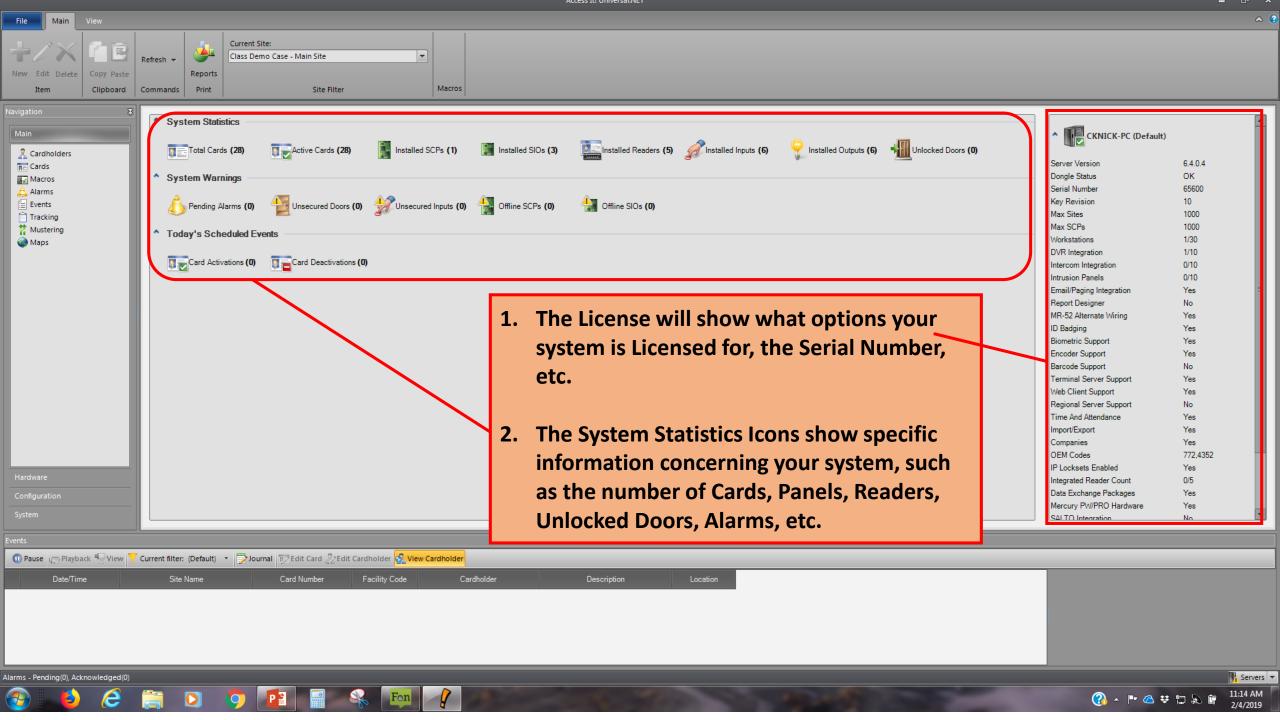


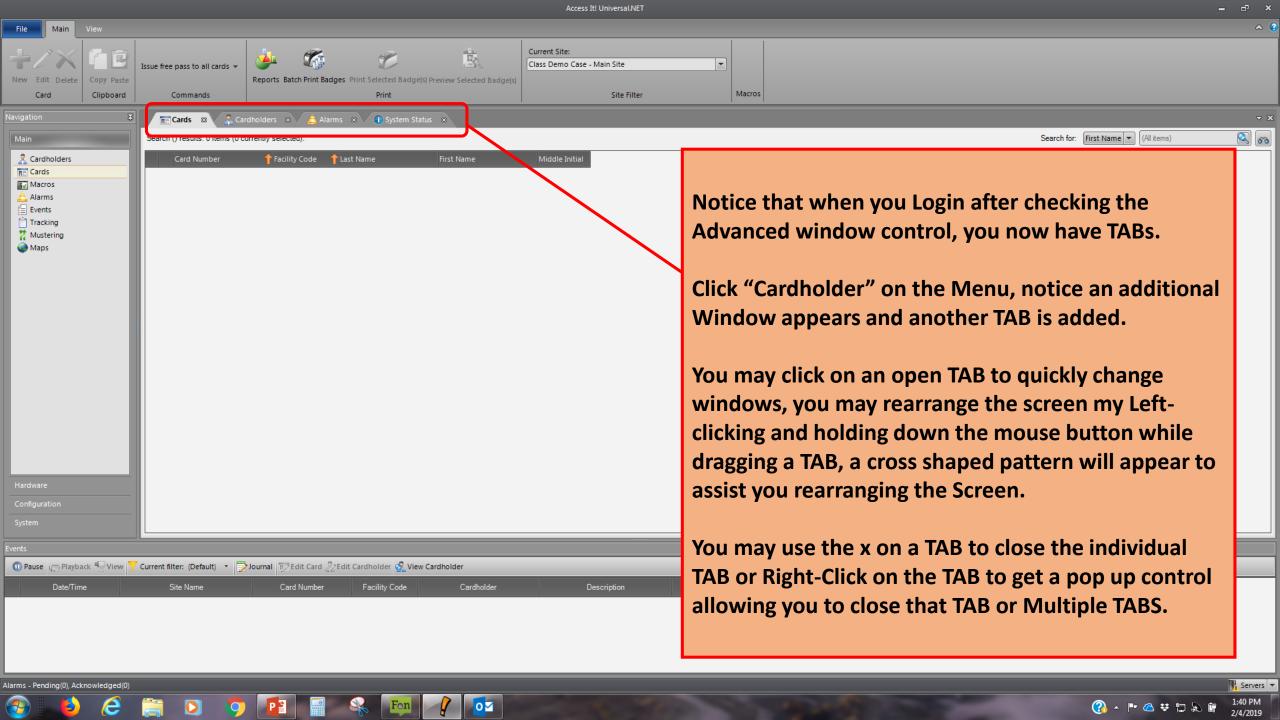


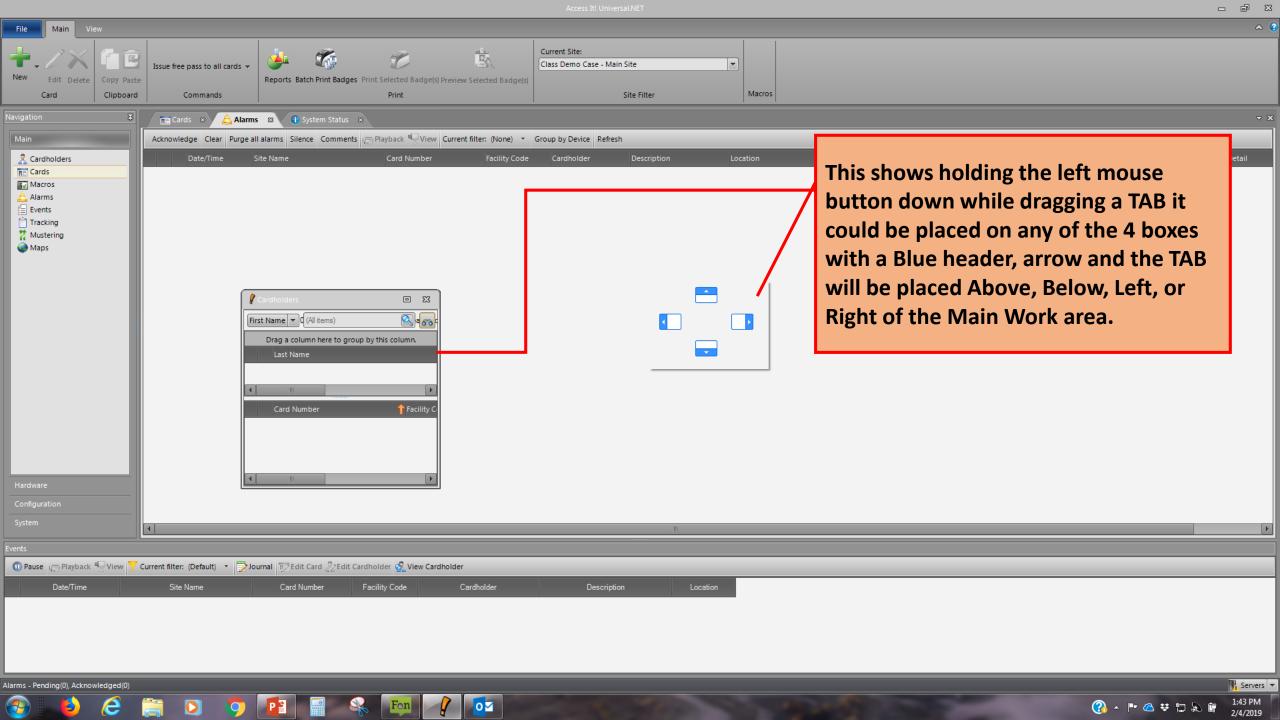

Usage - Cardholders

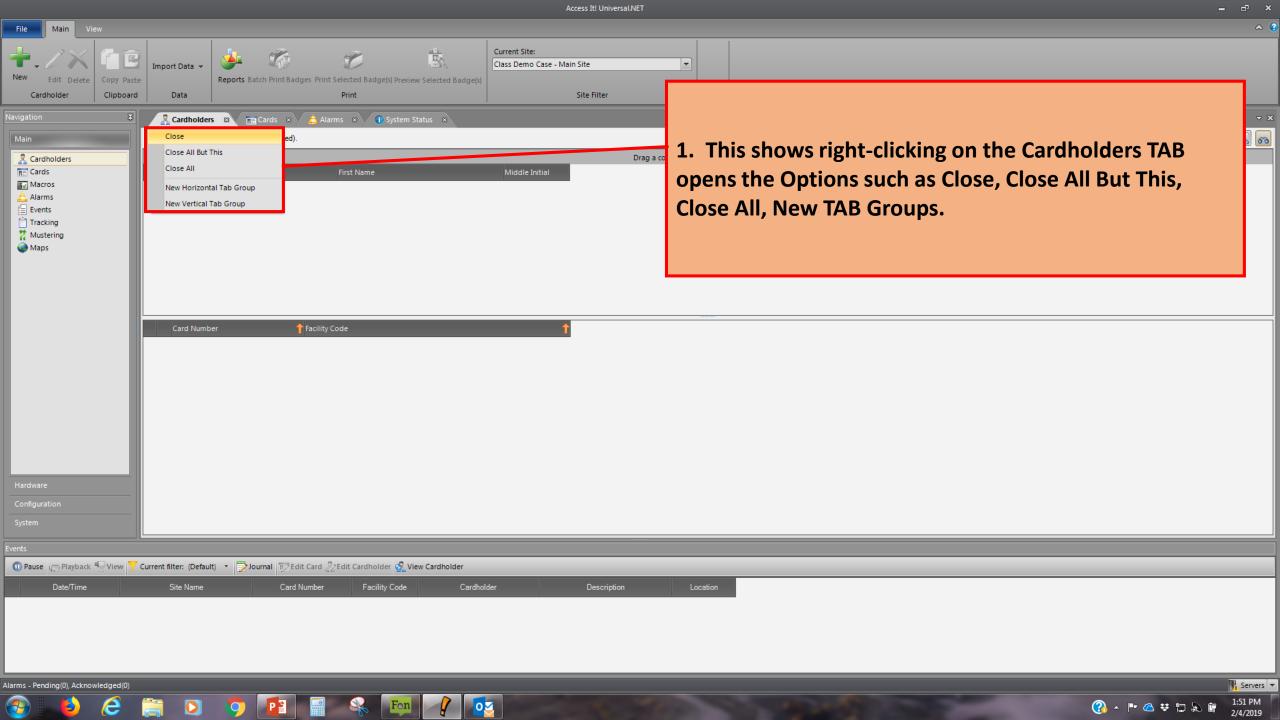

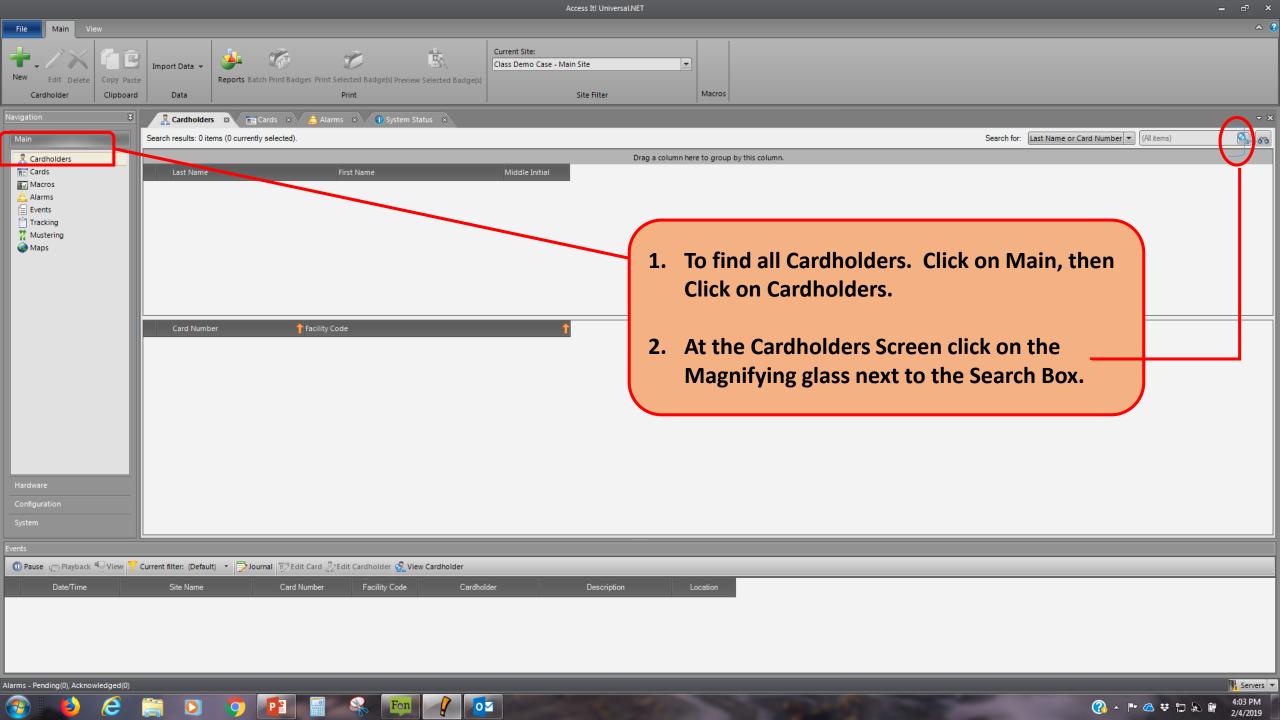

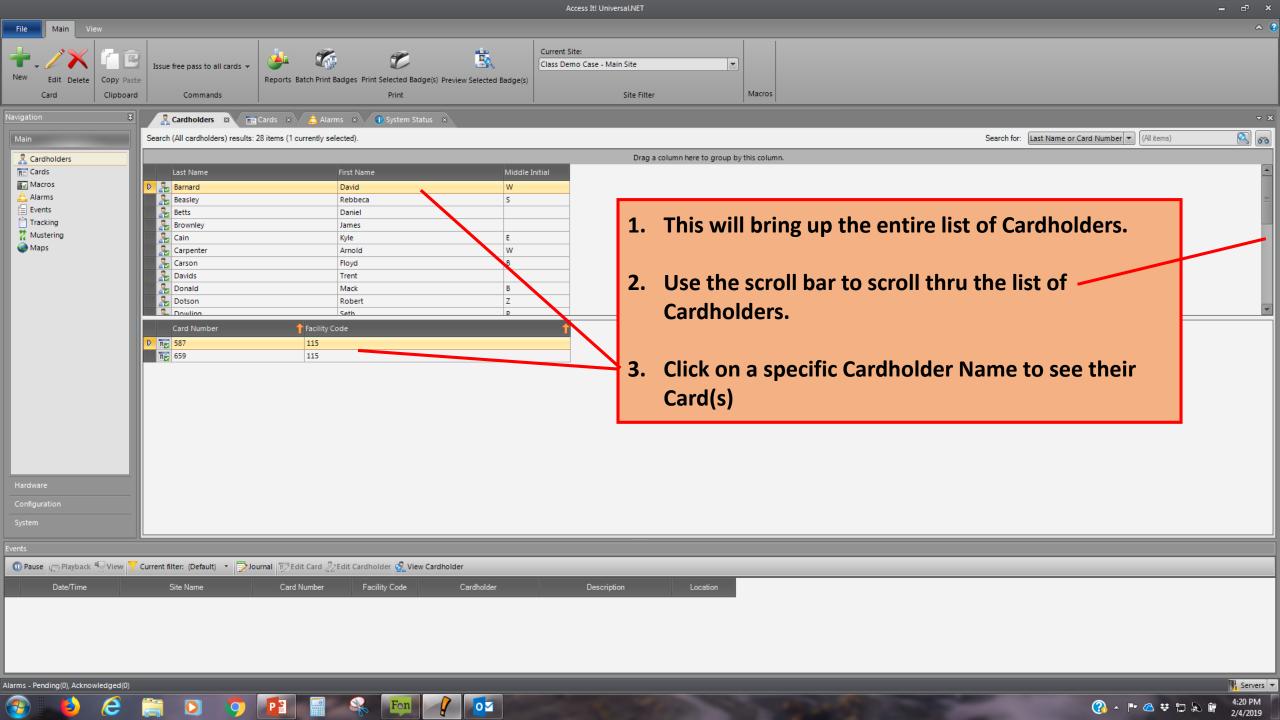



Card Number

115

File

2010 Black ▼

Cardholders

RE Cards

Macros

💄 Alarms

Events

Tracking

Maps

Mustering

■ Playback View

Date/Time

Layout

Columns

Barnard

Beasley

Brownley

Carpenter

Carson

Davids

Donald

Dotson

R 659


Card Number


Betts


Cain





Servers 🔻

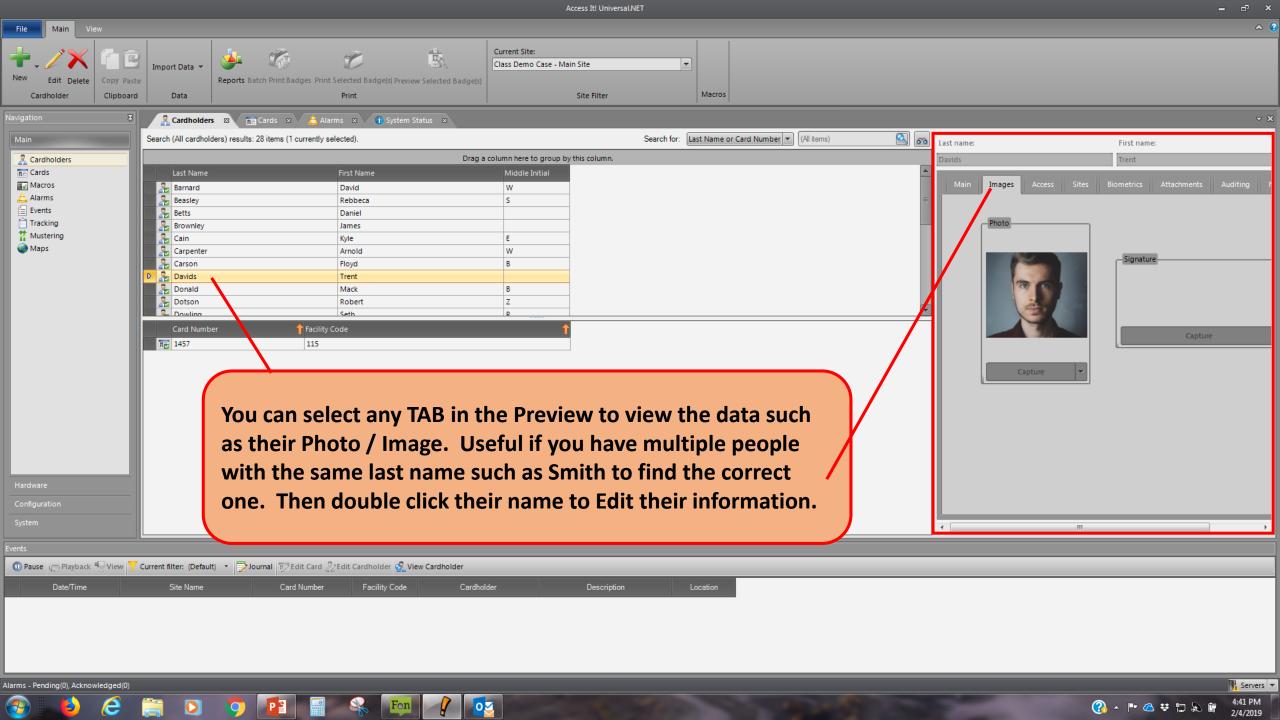


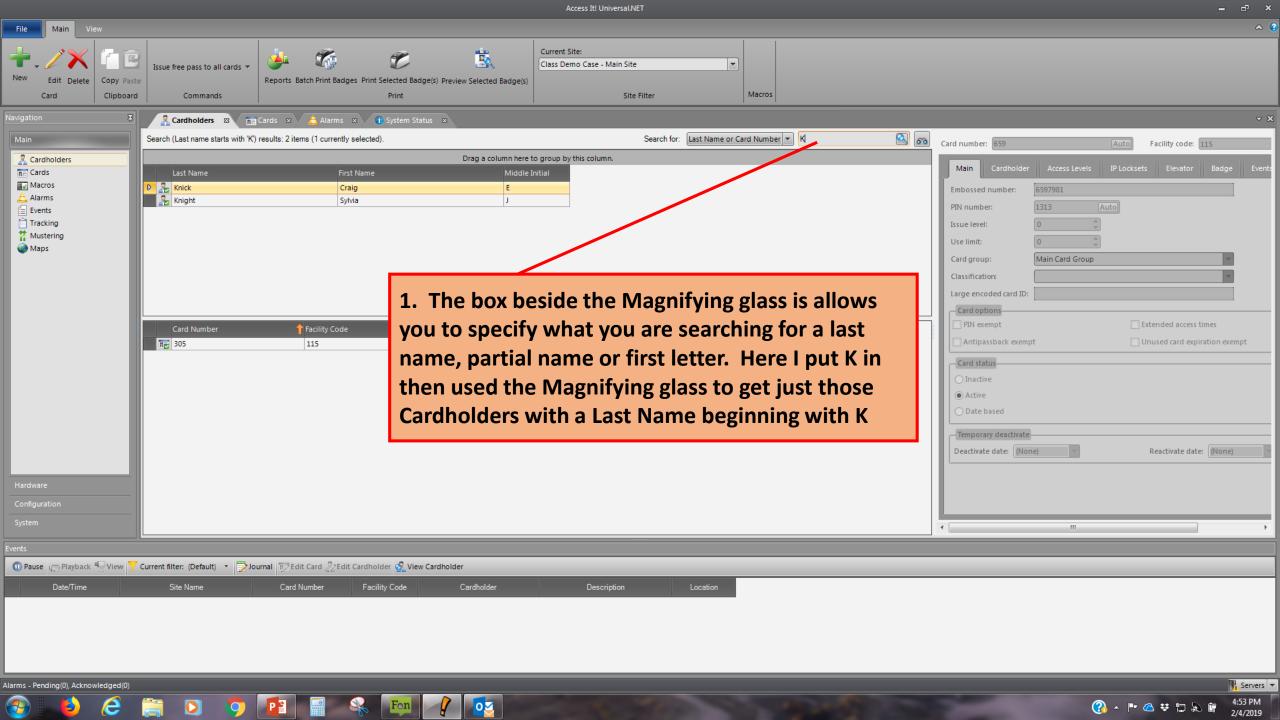


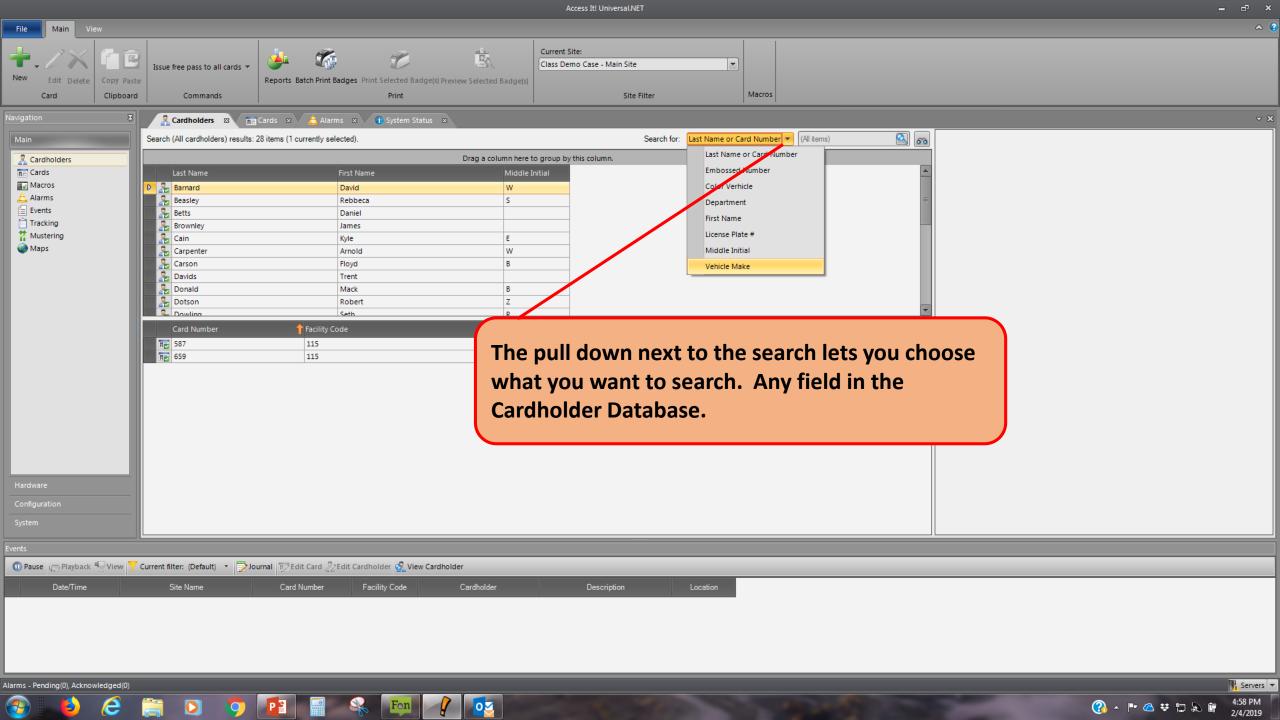


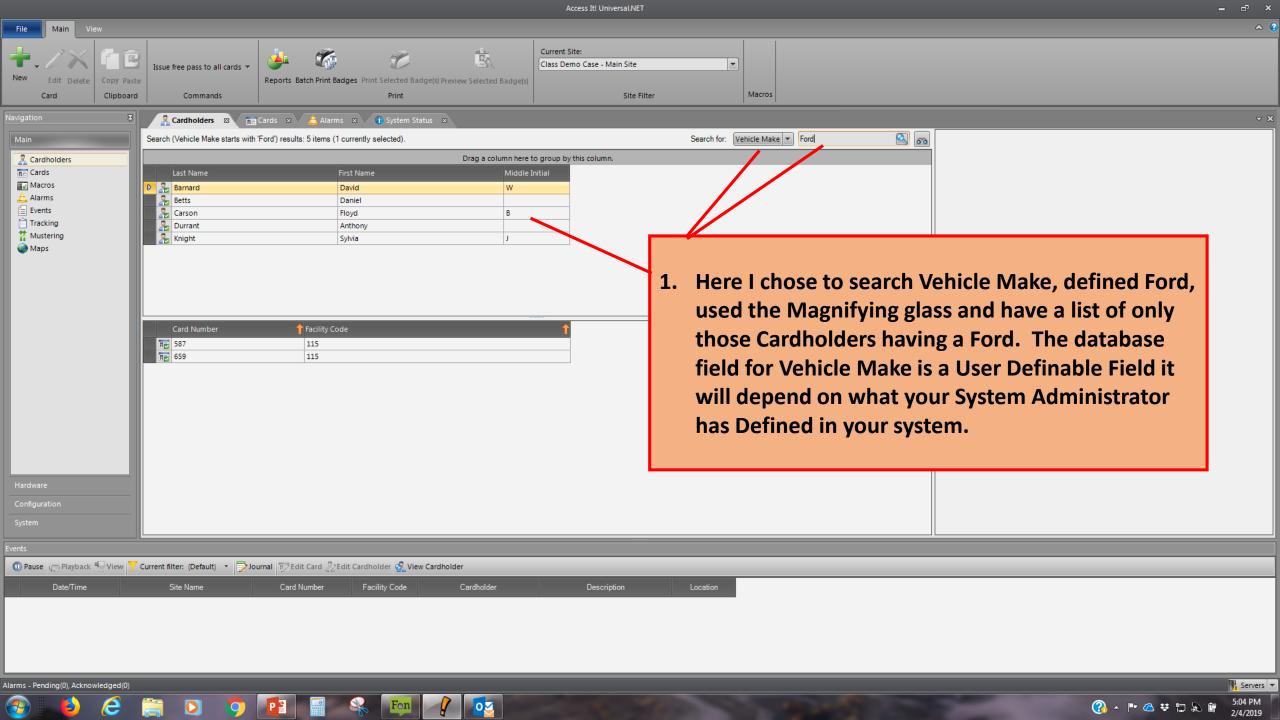


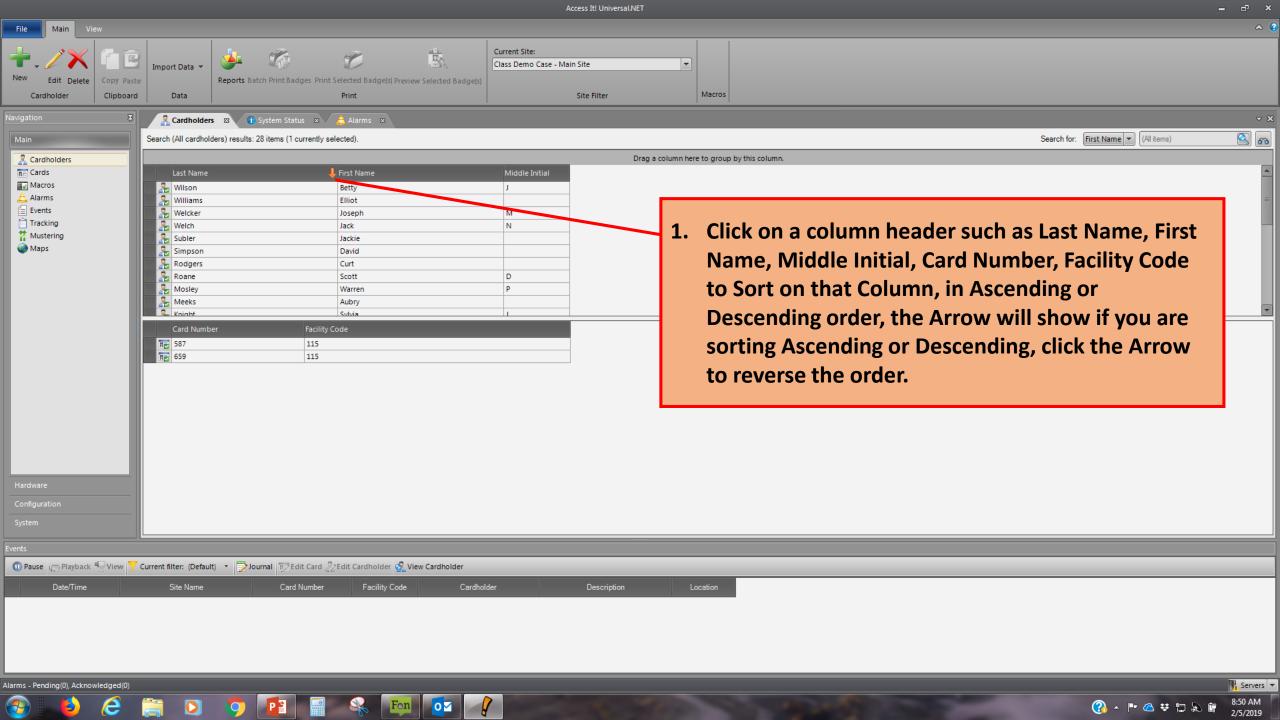


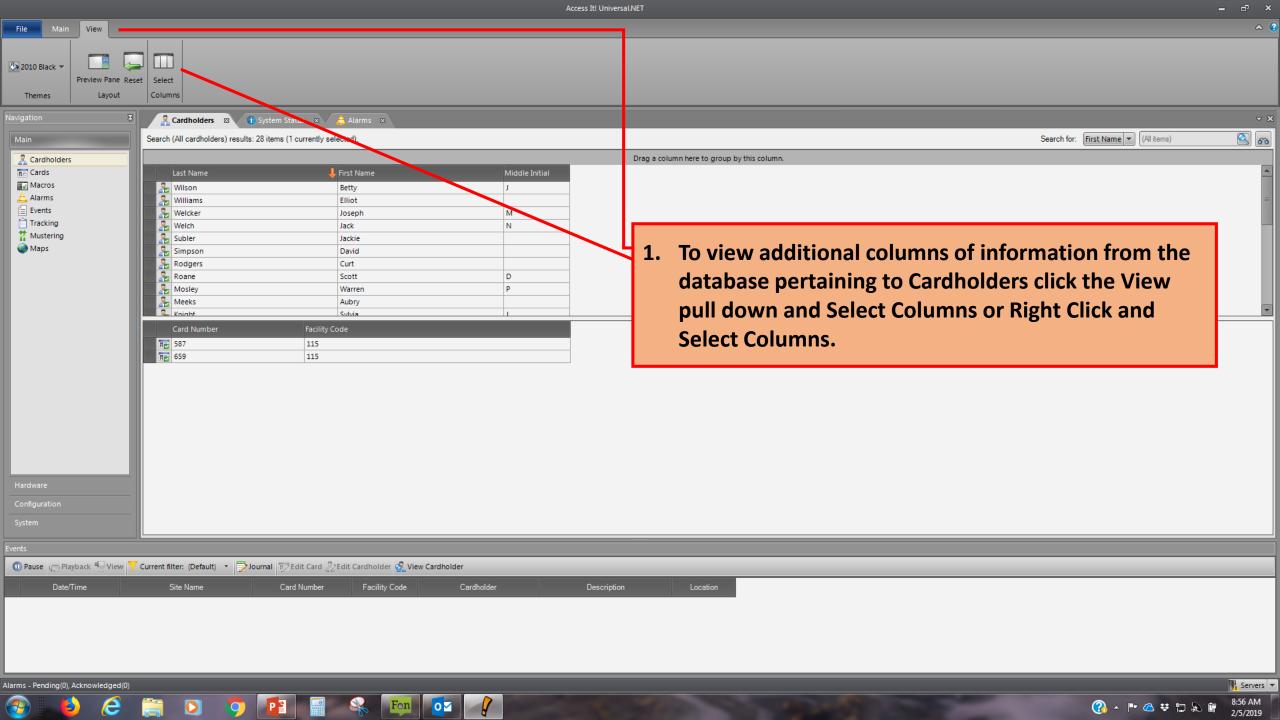

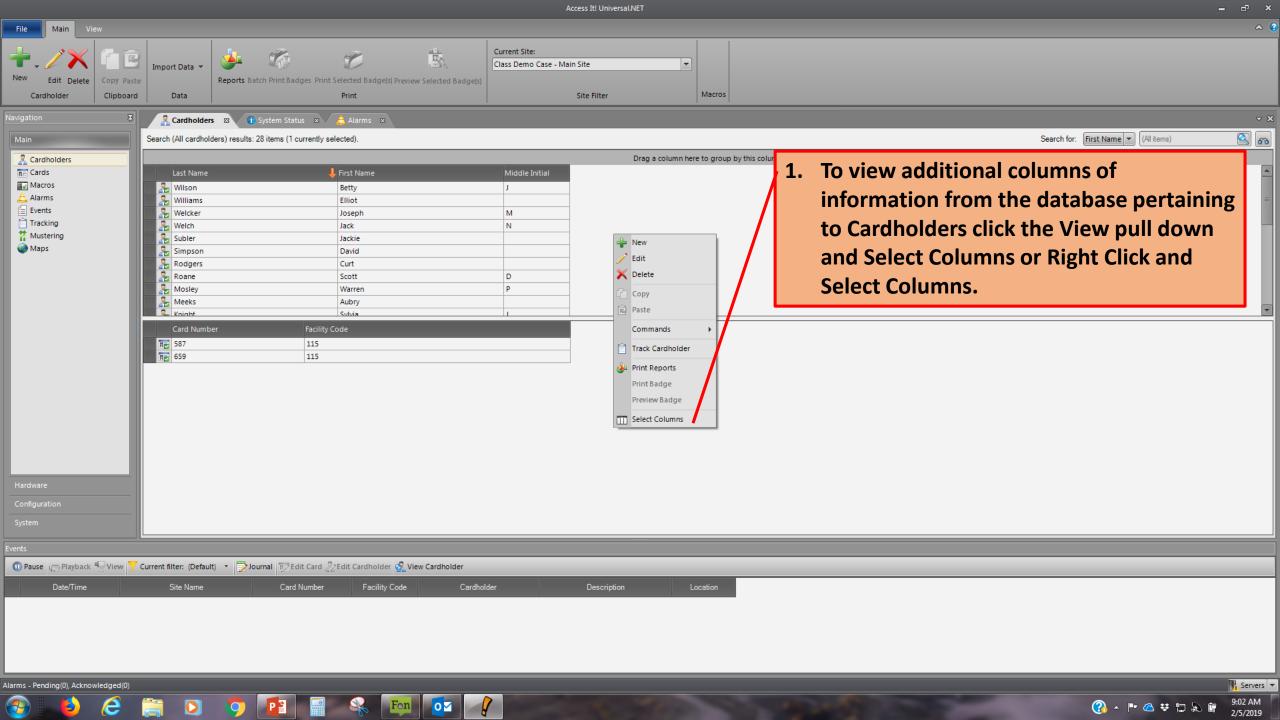

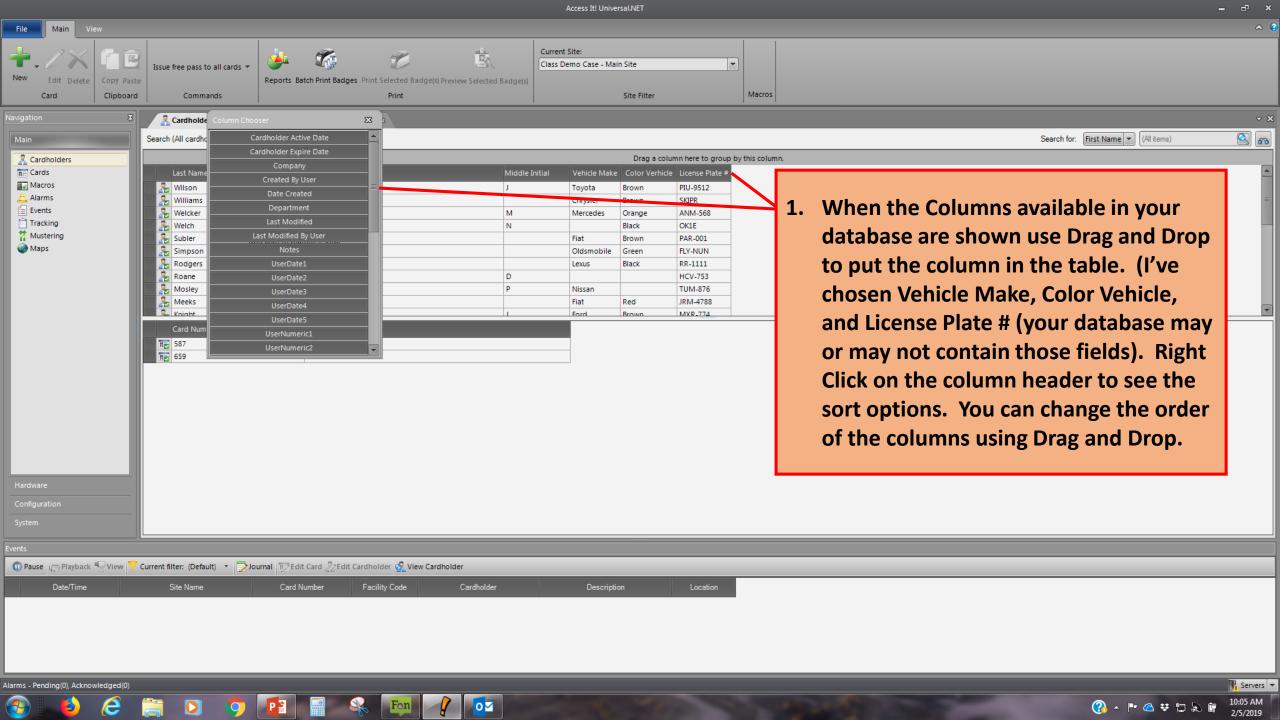


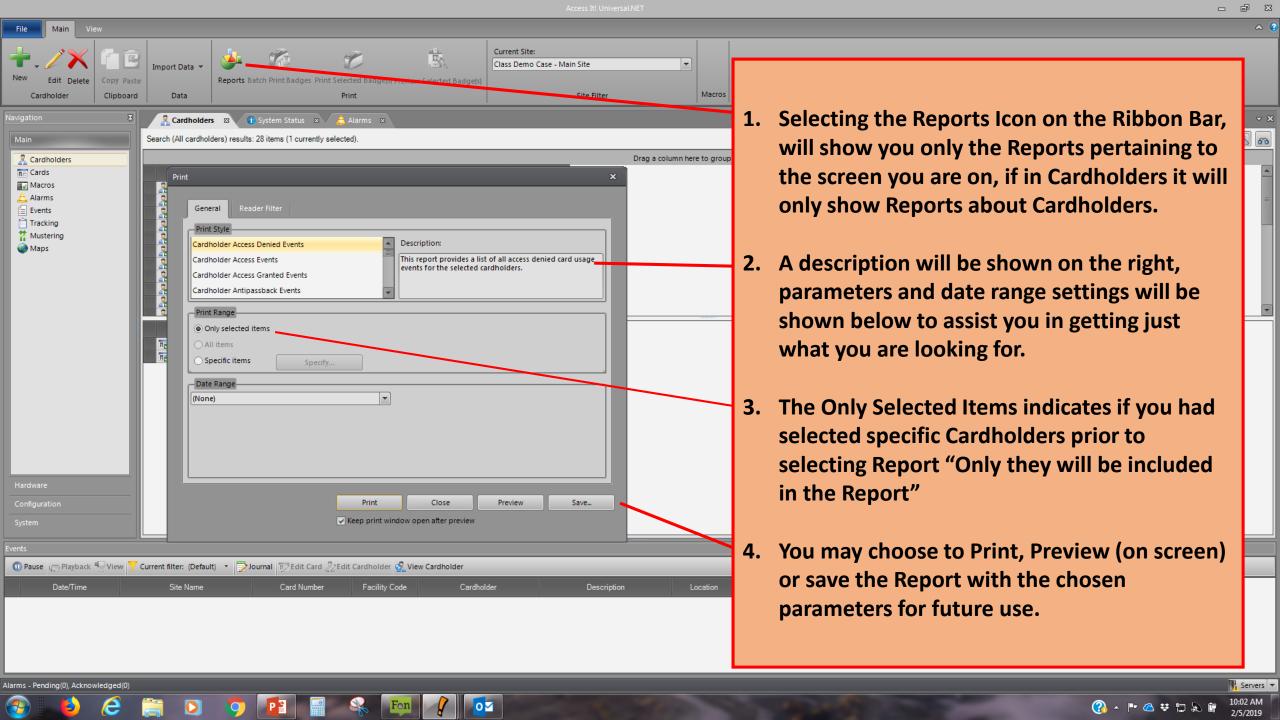


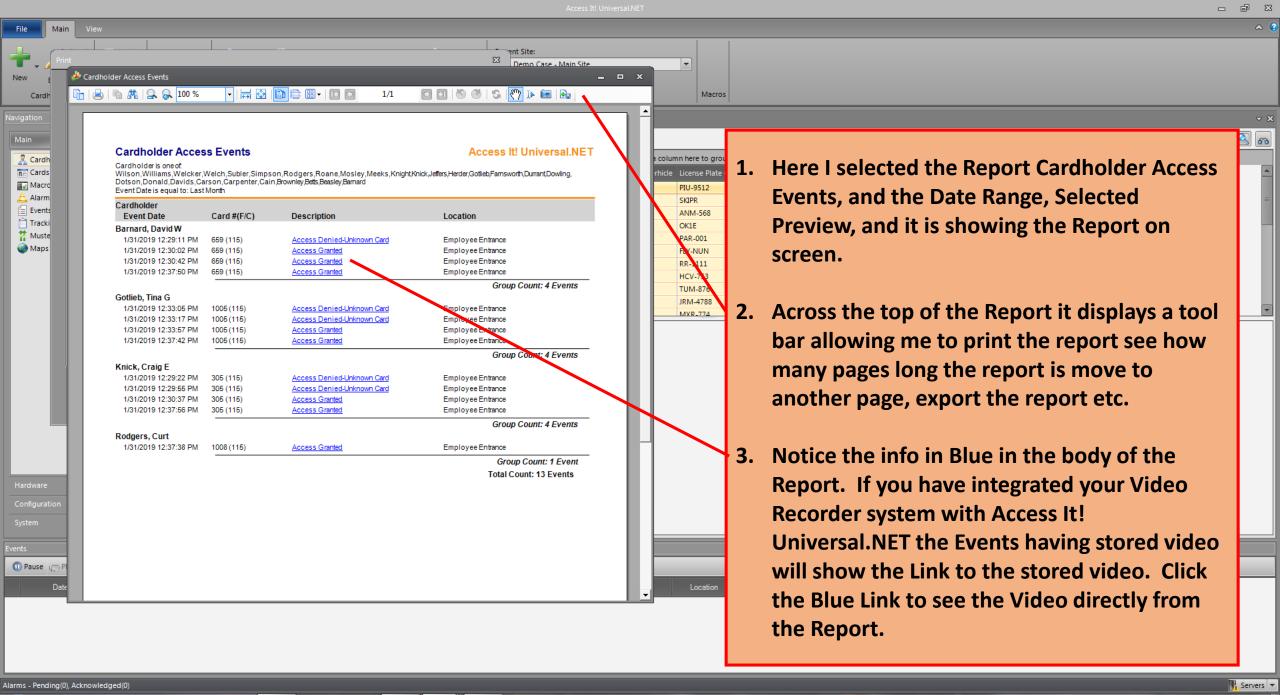






Usage - Hardware

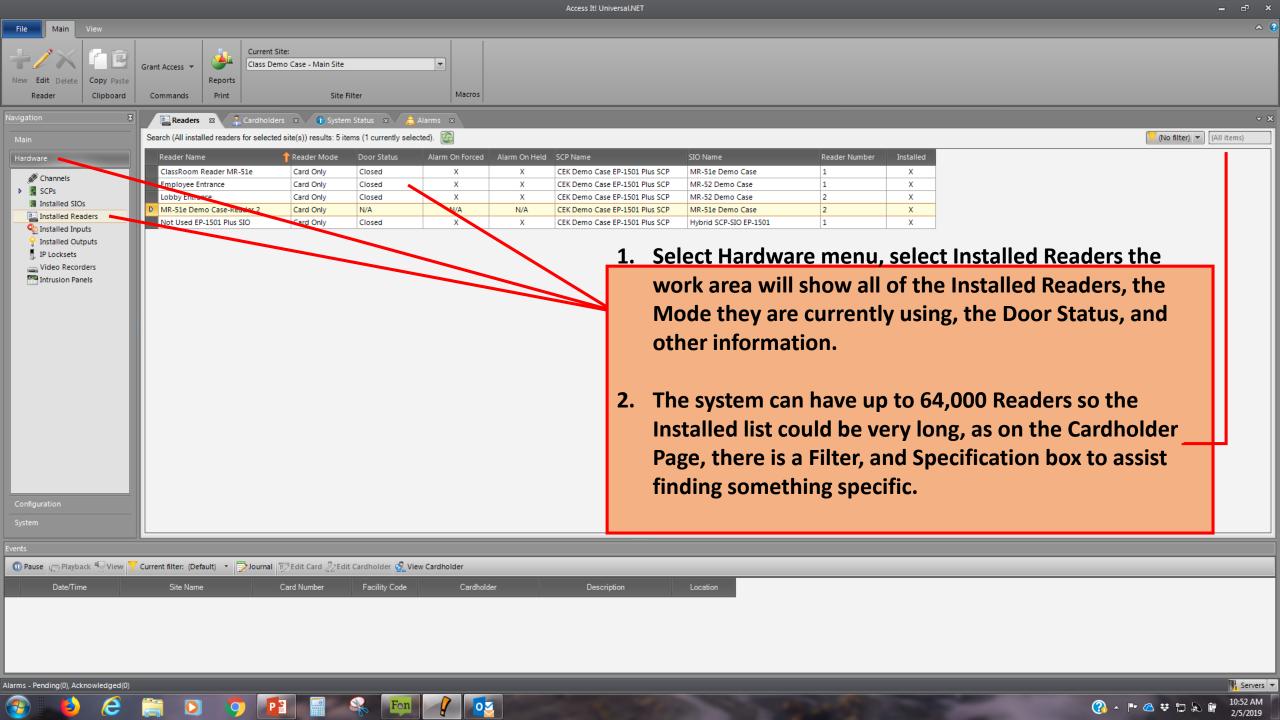


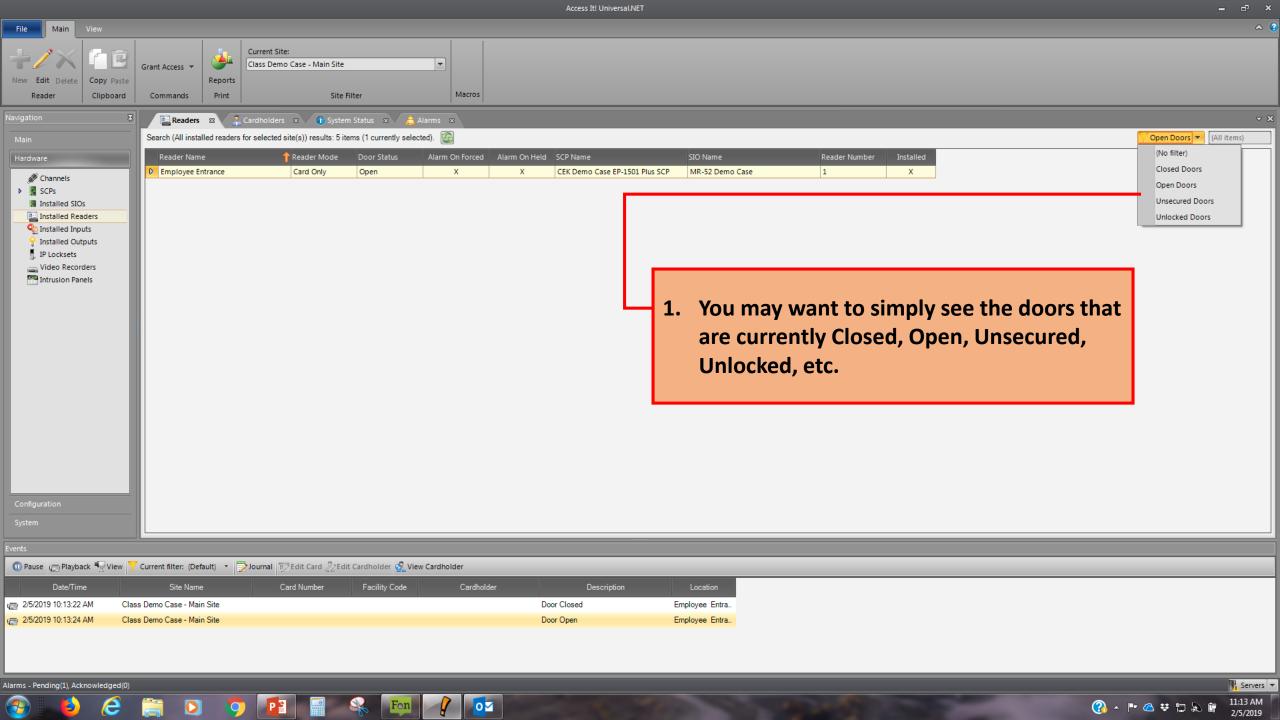


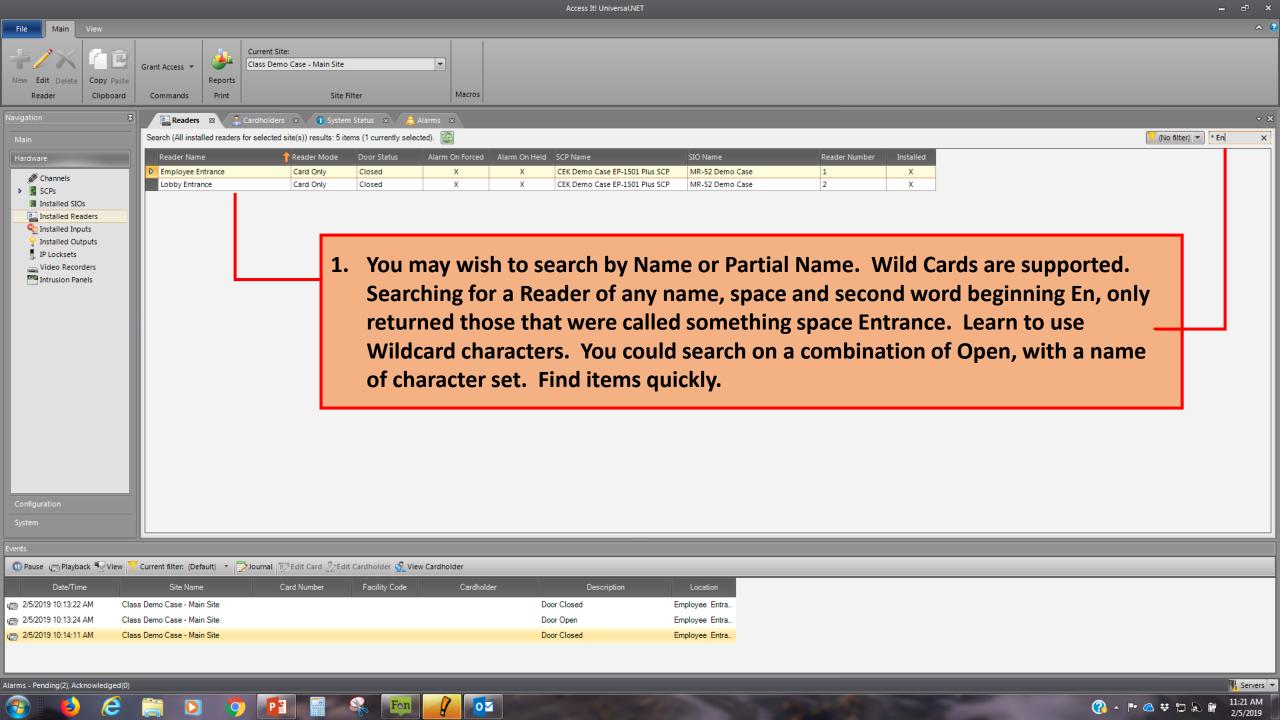


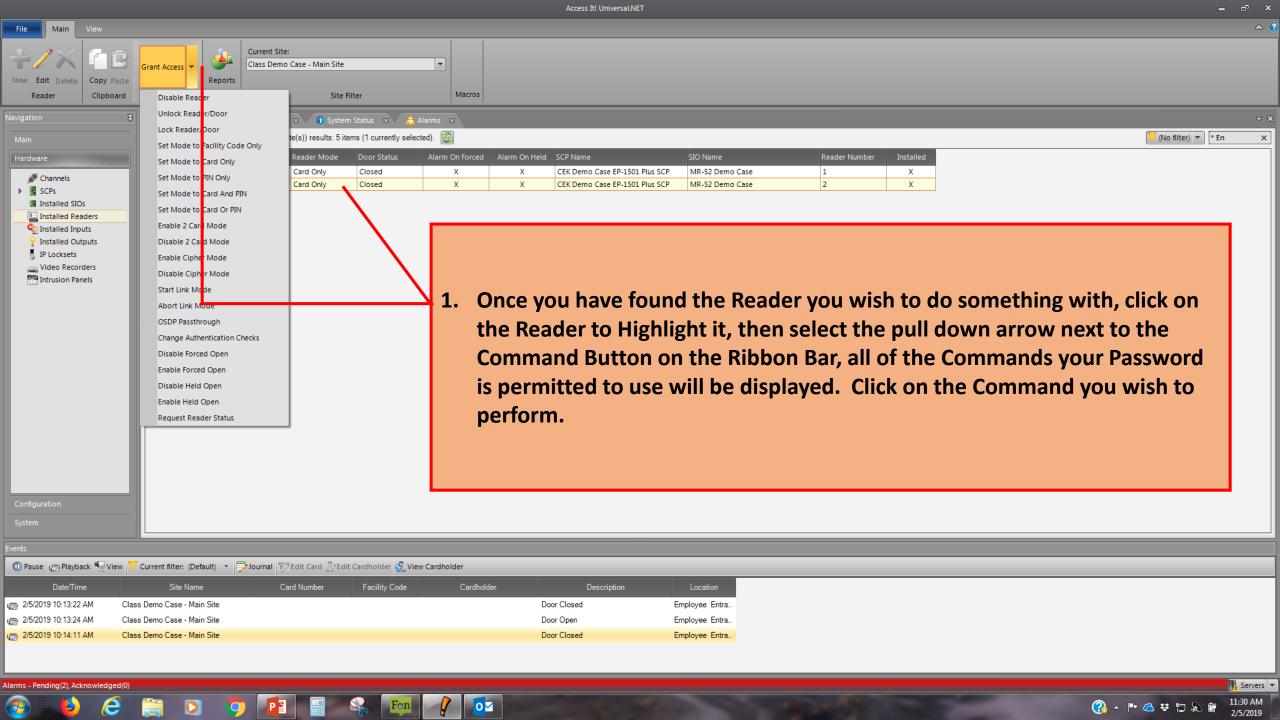


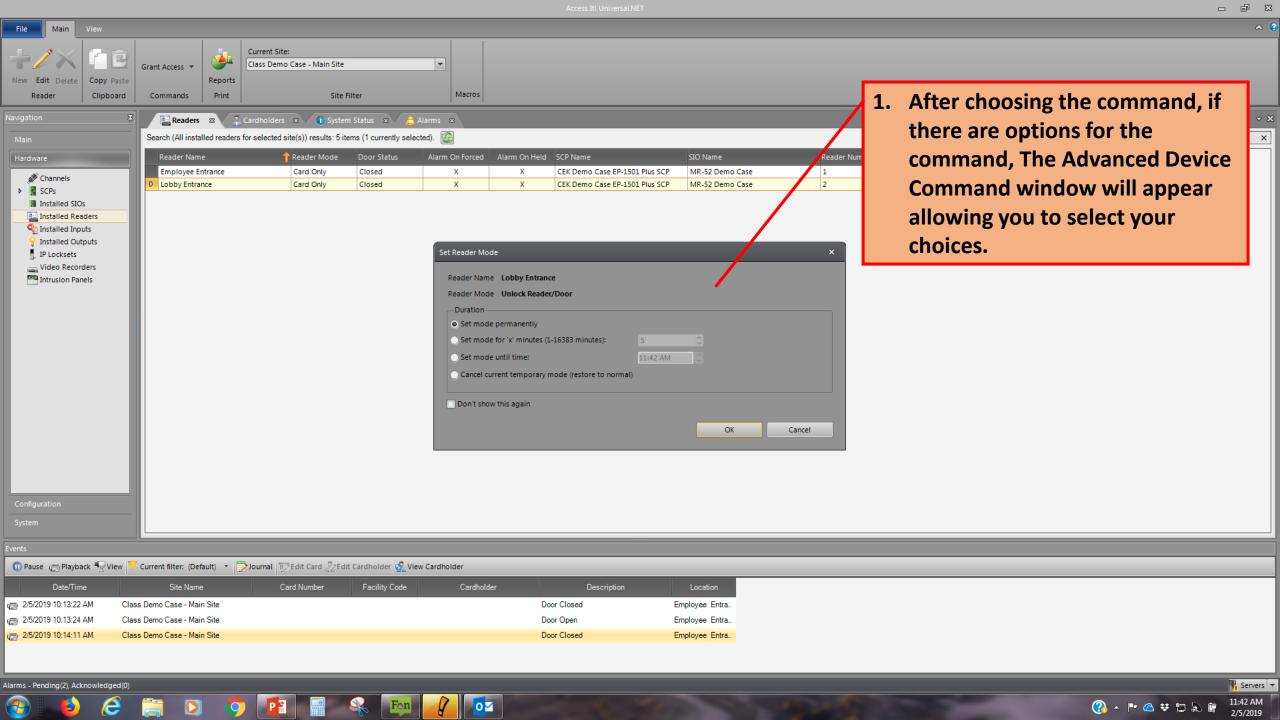

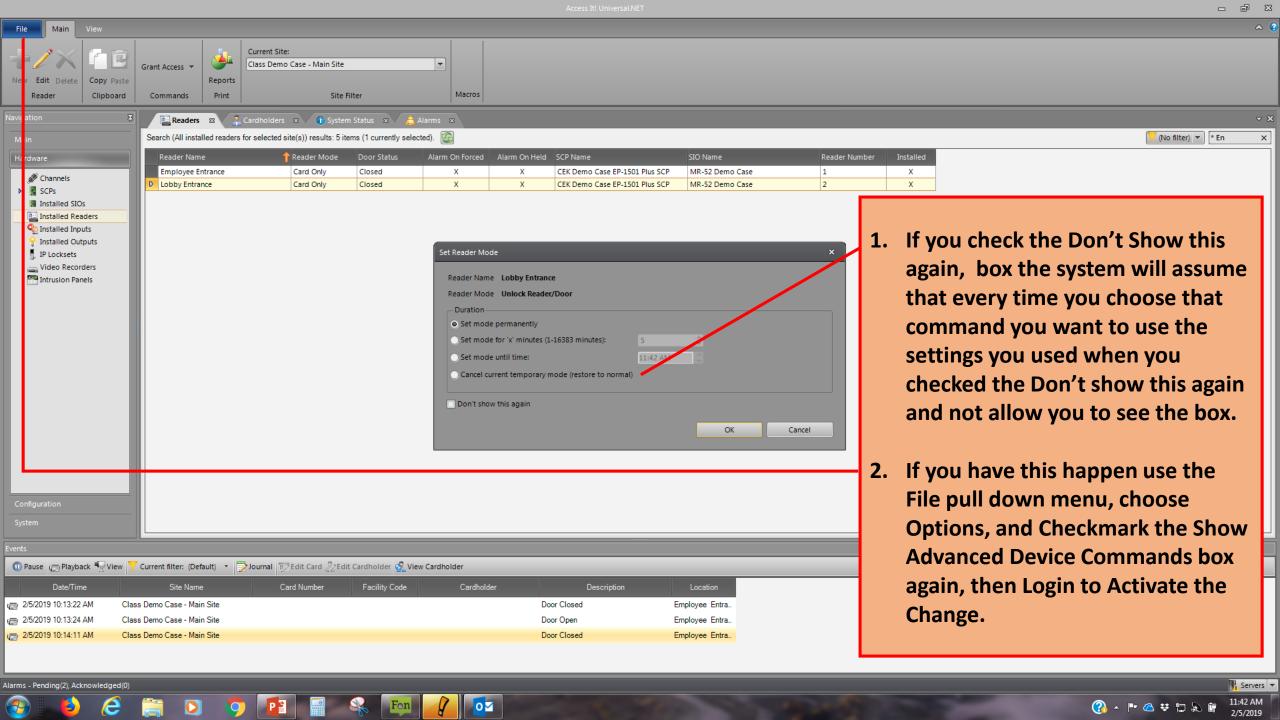


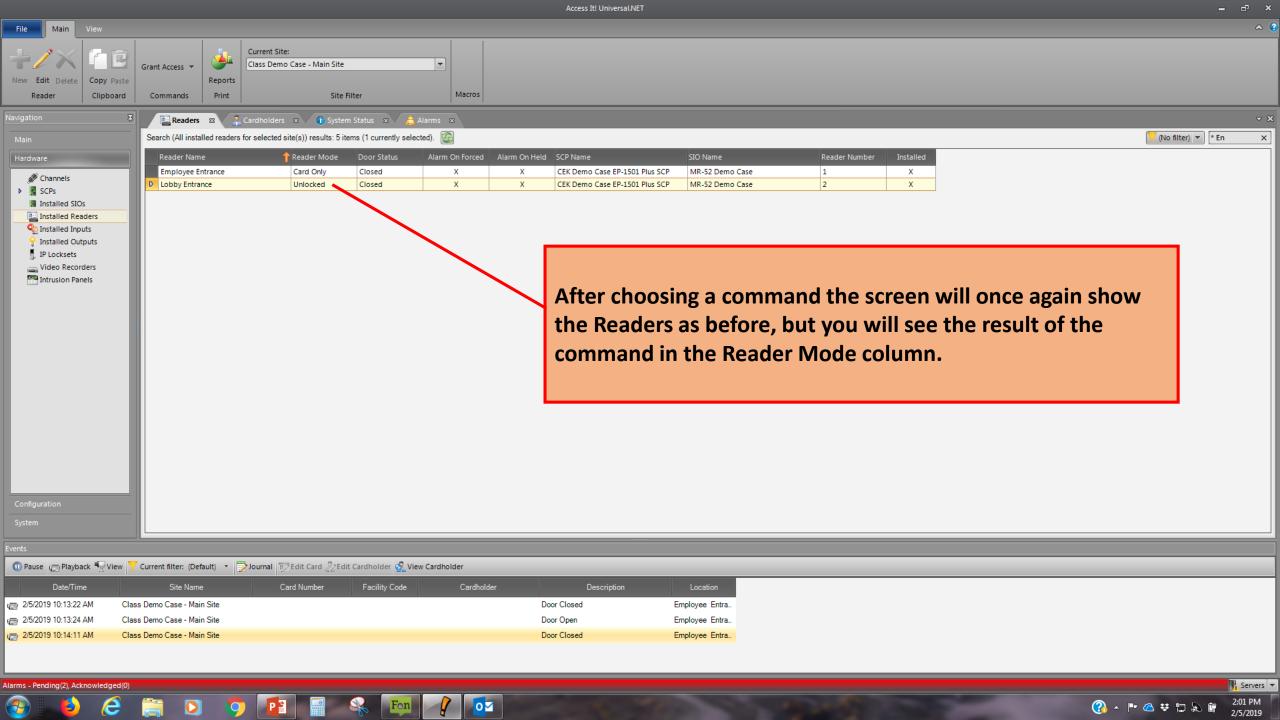

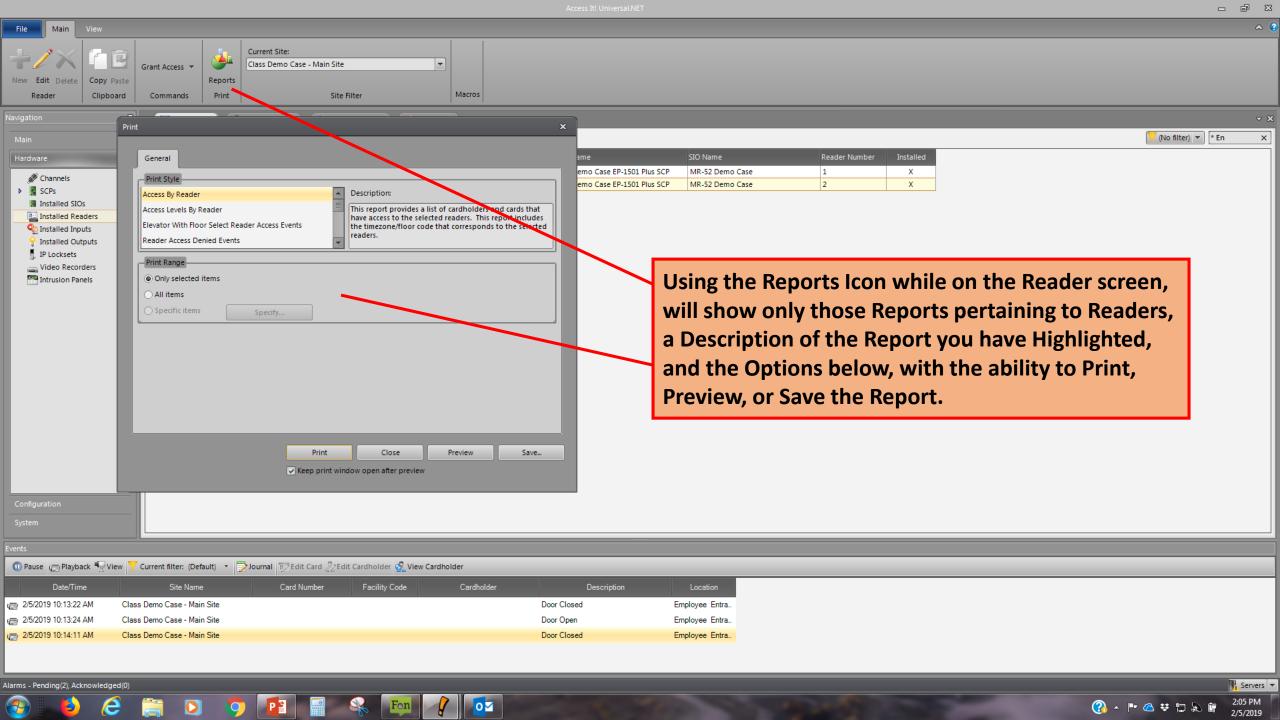

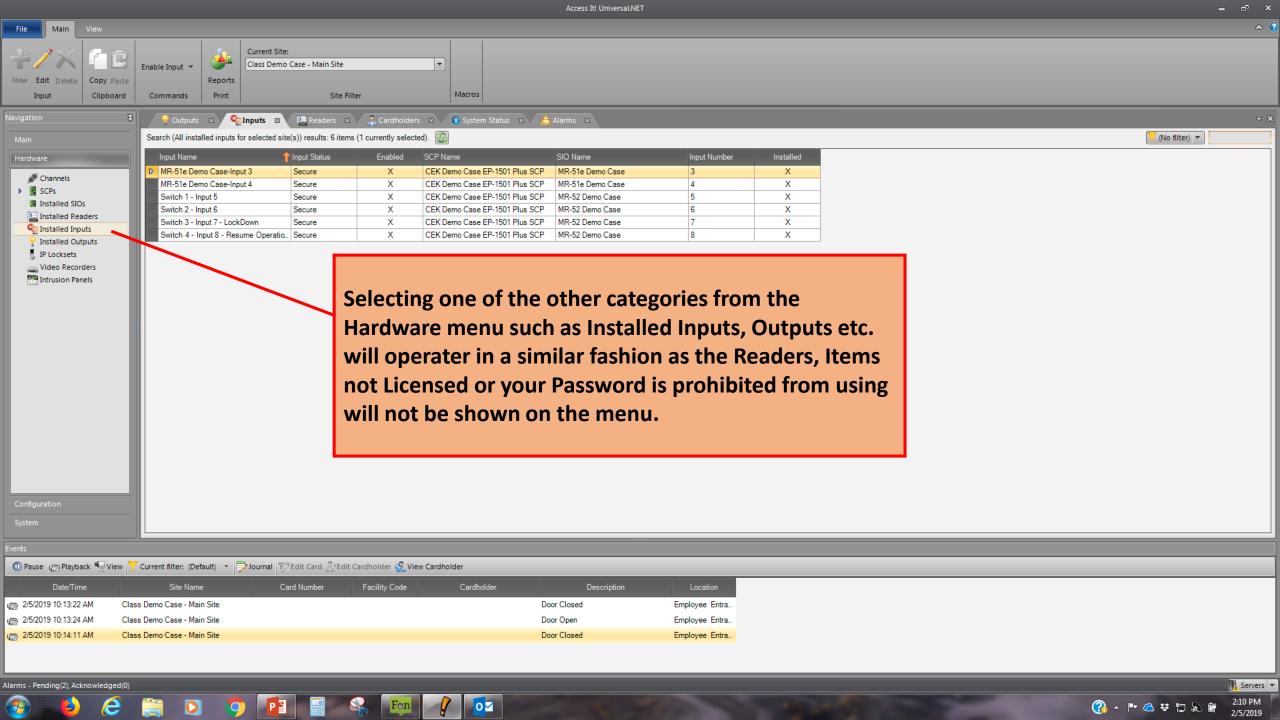

Usage - Configuration

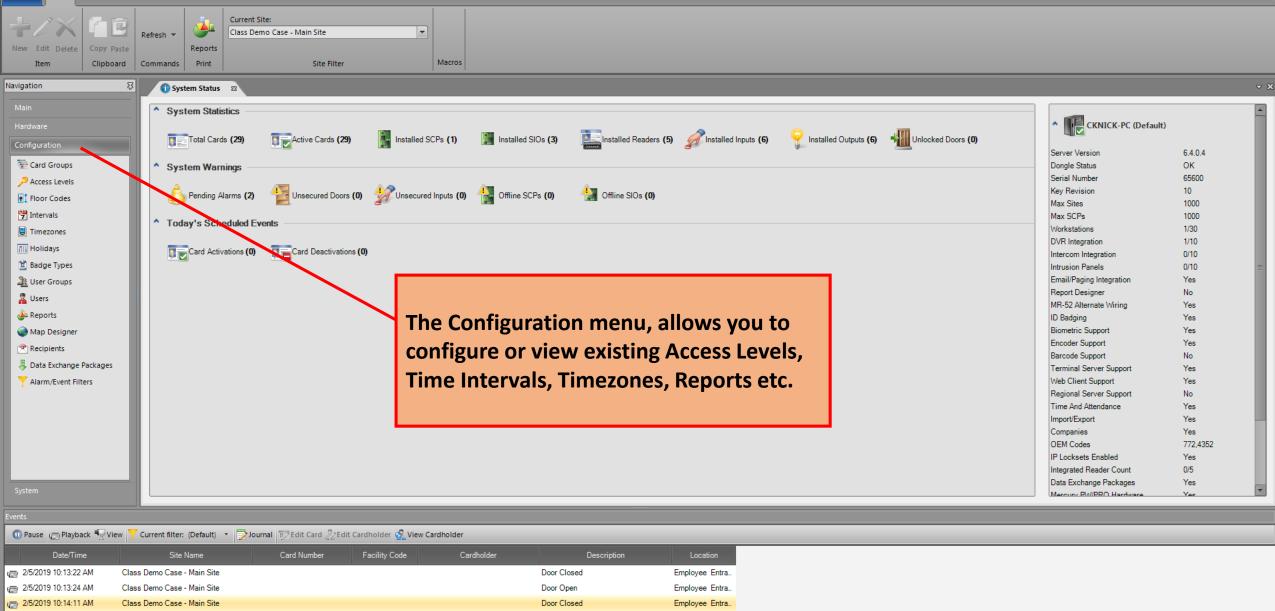


Main

Alarms - Pending(2), Acknowledged(0)



Servers 🔻

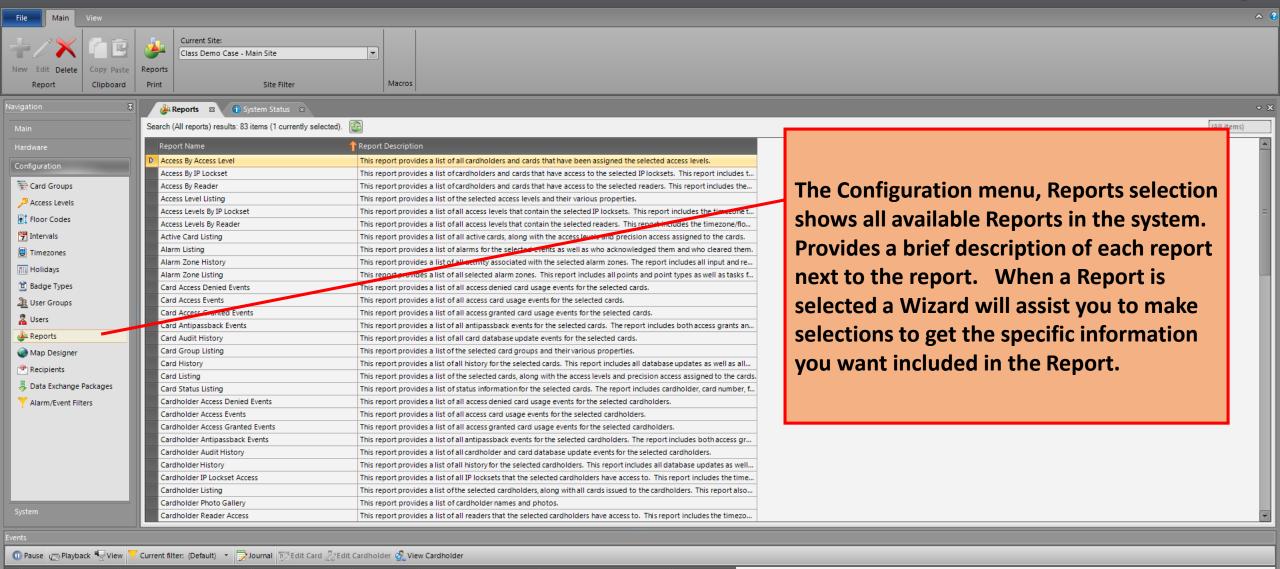

Description

Door Closed

Door Open

Door Closed

Location

Employee Entra.

Employee Entra.

Employee Entra.





Date/Time

2/5/2019 10:13:22 AM

2/5/2019 10:13:24 AM

2/5/2019 10:14:11 AM







Site Name

Class Demo Case - Main Site

Class Demo Case - Main Site

Class Demo Case - Main Site







Card Number





Facility Code









Servers 🔻

